BED ASSEMBLY INSTRUCTIONS

Anders, Larssen, Loft, Skyline

Tools needed:

Flathead screwdriver Allen wrench (provided)

Hardware included:

- 8 Bolts
- 4 Cross-dowel nuts
- 4 Black spoons

Parts included:

- 1 Headboard
- 1 Footboard
- 2 Side rails
- 1 Slat roll
- 1 Center support rail and screws (queen, king, California king)


Directions:

- 1. Place headboard upright near its desired placement.
- 2. The rail end with empty pre-drilled holes goes toward the headboard; the end with the steel-threaded inserts will attach to the footboard. Additionally, the rails will be installed with the ledger strip closer to the top of the rail.
- 3. Insert each cross-dowel nut into the pre-drilled holes in the headboard end of side rail, leaving the screwdriver slot showing. Turn each cross-dowel nut so the threaded hole lines up with the hole in the end of the rail.
- 4. Working on one side, insert bolts from the back of the headboard, going through headboard and into end of rail and into cross-dowel nut. Use the Allen wrench to lightly tighten. Attach footboard, insert bolts through blocks on the inside of footboard and into the steel-threaded inserts already embedded in the rails. Lightly tighten the bolts. Repeat this process to attach the second rail.
- 5. Now that all four corners are in place, firmly tighten all bolts using the Allen wrench.
- 6. Place the four black spoons in holes on slat support ledges.
- 7. Queen, king, and California king: slide center support into slots on headboard and footboard. *see back for further information*
- 8. Place slats on rails and hook each end slat over the black spoons to prevent movement.
- 9. Place mattress on slats.

Wood naturally expands and contracts potentially causing bed connections to loosen over time. This expanding and contracting process is a natural characteristic of wood. Tighten hardware occasionally to restore the bed to original stability.

Center Support and Optional Center Leg

All queen, king, and California king beds are provided with a center support rail and screws, and optional center leg for the support bar. For most bed configurations, the center rail slides into the slots on the headboard and footboard.

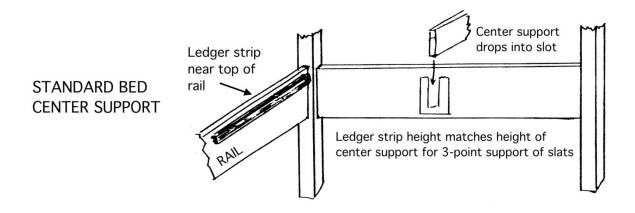

Note: while moving the bed with the center leg attached, be sure to pick up the sides of the bed so the center leg is off the floor as it can twist and break the center support if dragged across the floor.

Vermont Handcrafted Furniture / Vermont Furniture Designs

VIEST 1970